

HOW TO PRIME YOUR LAUNDRY PUMP

nexon

kinder › smarter › better



1. Press the 'PRIME' key for 5 seconds and the screen will display 'PRIME MODE' with 'PUMP ONE' underneath
2. Use the UP and DOWN keys to select the required pump number
3. Press and hold the ENTER key to prime the corresponding pump for as long as required
4. The screen will return to normal within approx 10 seconds

nexon

kinder › smarter › better

CALL: 0800 999 5006
EMAIL: sales@nexongroup.co.uk
VISIT: www.nexongroup.co.uk